

Congratulations on your purchase of an Arnett® air suspension product. We at Arnett Incorporated are proud to offer a high quality product at the industry's most competitive pricing. Thank you for your confidence in us and our product.

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your vehicle. The removal and installation of air suspension products should only be performed by a fully qualified, ASE Certified, professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the vehicle and isolation of any stored energy to prevent personal injury or property damage.

## "Engineered to Ride, Built to Last®"



**WARNING:** *The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.*

Arnett® is committed to the quality of its products. If you have a question or problem with any Arnett product, please contact Arnett by calling **800-251-8993** during normal business hours or email [techassistance@arnottinc.com](mailto:techassistance@arnottinc.com). (In the EU please call **+31 (0)73 7850 580** or email [info@arnotteurope.com](mailto:info@arnotteurope.com))

## GENERAL INFORMATION:

Reading this manual signifies your agreement to the terms of the general release, waiver of liability, and hold harmless agreement, the full text of which is available at [www.arnottinc.com](http://www.arnottinc.com).

- Not to be stored below 5°F (-15°C) or above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

**CAUTION:** *Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.*



*To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.*



*Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.*

## AIR SUSPENSION COMPRESSOR REMOVAL

1. SET STEERING TO STRAIGHT AHEAD.
2. RAISE VEHICLE.
3. REMOVE THE RIGHT FRONT WHEEL AND FENDER WELL. (FIGURE 1)



FIGURE 1

4. REMOVE THE AIR INTAKE ASSEMBLY FROM THE VEHICLE. (FIGURE 2)



FIGURE 2

5. REMOVE THE ELECTRICAL CONNECTOR. (FIGURE 3)

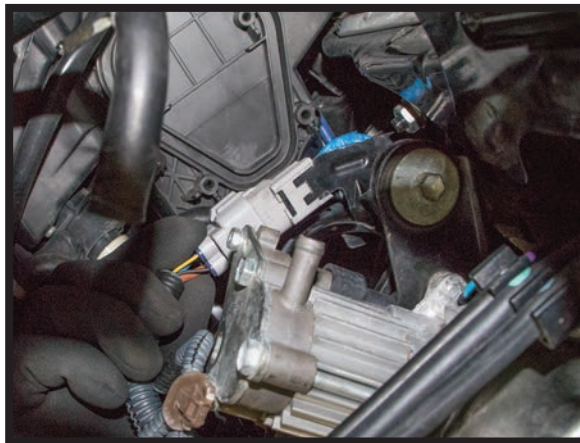


FIGURE 3

6. REMOVE THE AIR LINE FROM THE DRYER. (FIGURE 4)

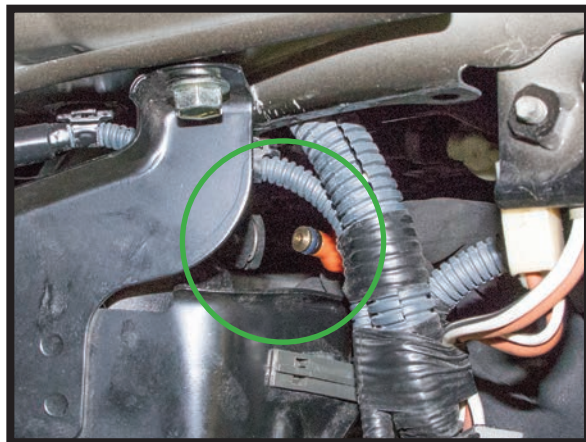


FIGURE 4

7. REMOVE THE AIR LINE FROM THE COMPRESSOR. (FIGURE 5)



FIGURE 5

**NOTE:** THE EXHAUST MAY BE LOOSENED FROM THE RUBBER ISOLATORS TO ALLOW MORE FLEXIBILITY DURING REMOVAL.

8. LOOSEN AND REMOVE THE THREE BOLTS FROM THE COMPRESSOR AS ILLUSTRATED BELOW. (FIGURES 6, 7, 8)

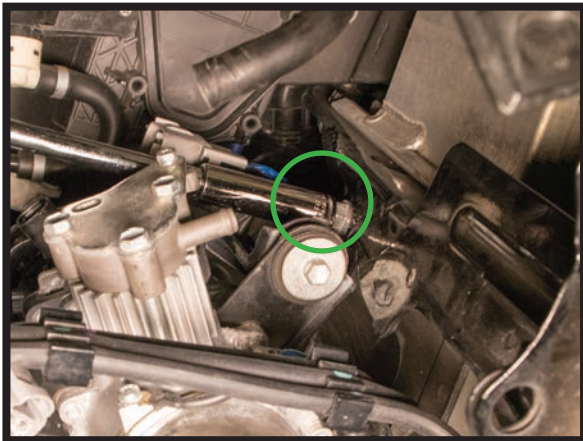


FIGURE 6

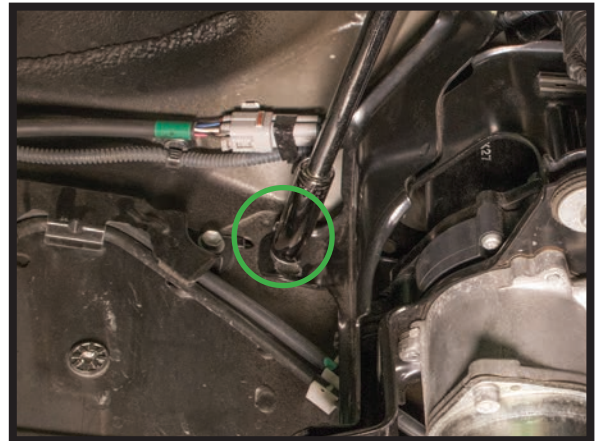


FIGURE 7

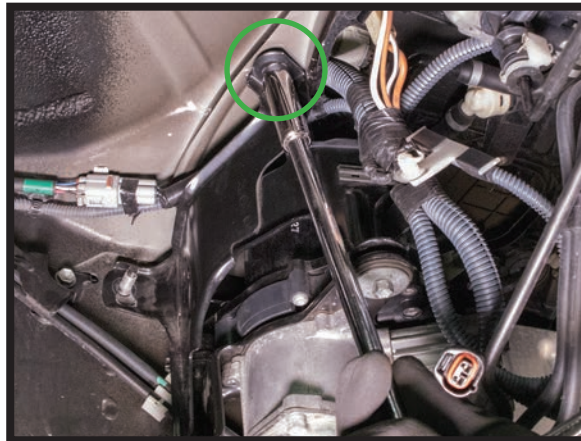


FIGURE 8

9. REMOVE THE COMPRESSOR FROM THE VEHICLE. (FIGURE 9)



FIGURE 9

10. REMOVAL COMPLETE

## AIR SUSPENSION COMPRESSOR DISASSEMBLY

1. REMOVE THE THREE BOLTS FROM THE COMPRESSOR BRACKET. (FIGURE 10)



FIGURE 10

2. REMOVE THE THREE RUBBER ISOLATORS FROM THE BRACKET HOLES. (FIGURE 11)



FIGURE 11

3. DISCONNECT THE ELECTRICAL CONNECTOR FROM THE BRACKET. (FIGURE 12)



FIGURE 12

4. DISASSEMBLY COMPLETE.

## AIR SUSPENSION COMPRESSOR ASSEMBLY

1. ATTACH THE BRACKET TO THE COMPRESSOR USING THE THREE BOLTS AND ISOLATORS. (FIGURES 13, 14)



FIGURE 13



FIGURE 14

2. ASSEMBLY COMPLETE.

## AIR SUSPENSION COMPRESSOR INSTALLATION



*Tighten all nuts and bolts to manufacturer's specifications during the installation process.*



*Do not remove the air fitting from the air suspension compressor. Doing so may cause damage or void warranty. Remove the white shipping pin from the new air fitting and insert the air line until fully secure.*

**NOTE:** THE EXHAUST MAY BE LOOSENED FROM THE RUBBER ISOLATORS TO ALLOW FOR MORE FLEXIBILITY DURING INSTALLATION.

1. INSTALL THE COMPRESSOR INTO THE VEHICLE. REINSTALL THE THREE BOLTS AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURES 15, 16)



FIGURE 15



FIGURE 16



2. REINSTALL THE ELECTRICAL CONNECTOR. (FIGURE 17)



FIGURE 17

3. RECONNECT THE AIR LINE TO THE DRYER. (FIGURE 18)

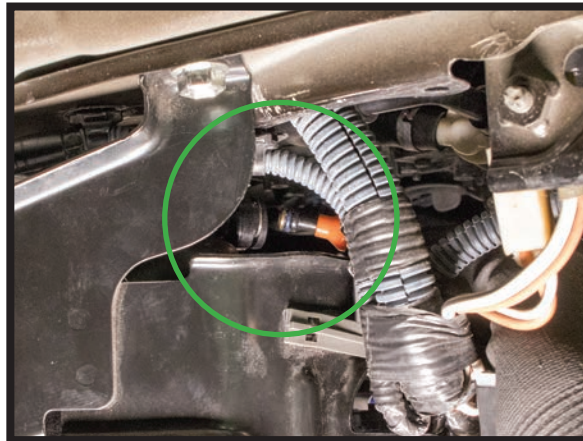


FIGURE 18

4. RECONNECT THE AIR LINE TO THE COMPRESSOR. (FIGURE 19)



FIGURE 19

5. REINSTALL THE AIR INTAKE ASSEMBLY. (FIGURE 20)



FIGURE 20

6. REINSTALL THE FENDER WELL.  
7. REINSTALL THE WHEEL.  
8. LOWER THE VEHICLE  
9. INSTALLATION COMPLETE.