



# INSTALLATION MANUAL

**K-4473**

**Canister Bracket Accessory Kit (MC-3585/MC-3586)  
2018-Present Harley-Davidson® Softail**



***ELEVATE YOUR RIDE.®***

1. Remove the canister. (Figure 1)



FIGURE 1

2. Demount the OE canister bracket. Keep the screws for step 6, do not dispose of them. (Figure 2)



FIGURE 2

3. Remove the valve block from the compressor bracket. (Figure 3)



FIGURE 3

4. Turn the compressor to a 90° angle to reposition the bracket. (Figure 4)



FIGURE 4

5. Mount the K-4473 bracket to the compressor bracket. (Figure 5)

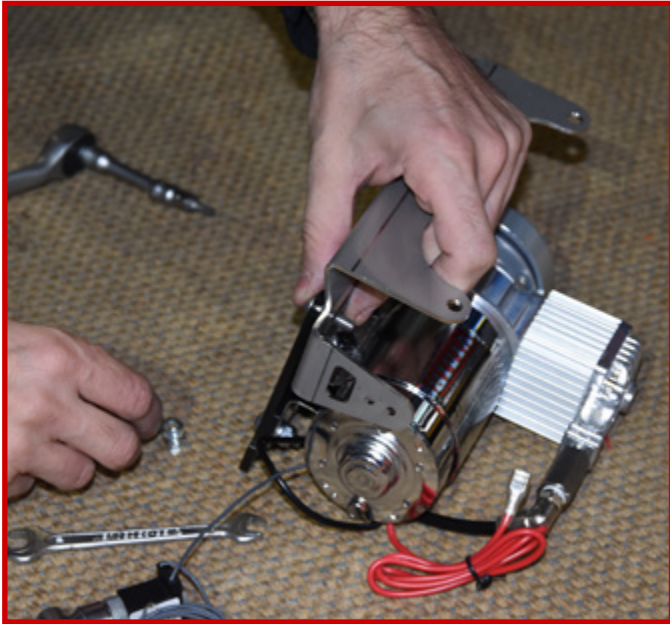


FIGURE 5

6. Relocate the valve block. (Figure 6)



FIGURE 6

7. Install the canister by re-using the OE screws. (Figure 7)

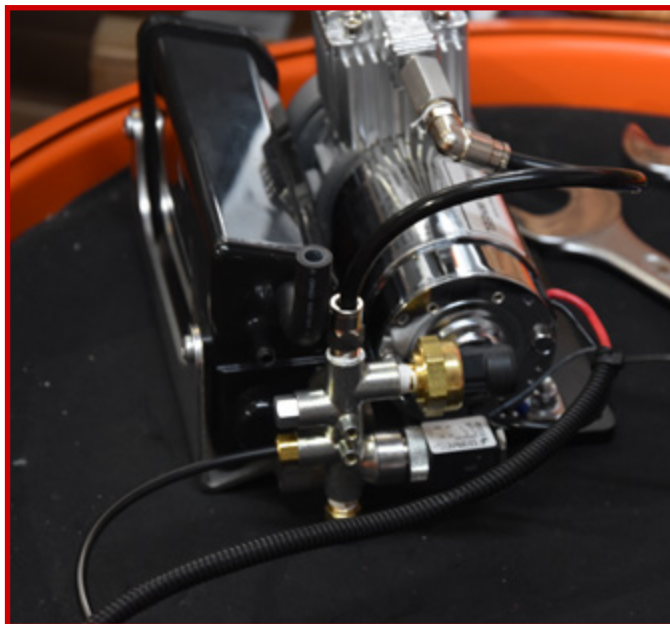


FIGURE 7

8. Install the completely assembled compressor unit on the motorcycle. Connect the canister using the provided tubing. (Figure 8)



FIGURE 8

# Arnott™

## Motorcycle Suspension

### Arnott US Business Office:

[www.arnottinc.com](http://www.arnottinc.com)

100 Sea Ray Drive  
Merritt Island, FL 32953

**Call:** 800.251.8993

321.868.3016

**Fax:** 321.868.3703

**Email:** [techassistance@arnottinc.com](mailto:techassistance@arnottinc.com)

### Arnott Europe Business Office:

[www.arnotteurope.com](http://www.arnotteurope.com)

Docterskampstraat 1E/1F, 3  
5222 AM 's-Hertogenbosch (NL)

**NL Phone:** +31 73 7850 580

**DE Phone:** +31 85 2087 438

**UK Phone:** +44 203 3186 124

**BE Phone:** +32 258 846 90

**ES Phone:** +34 91 901 10 56

**FR Phone:** +32 78 48 46 93

**Email:** [info@arnotteurope.com](mailto:info@arnotteurope.com)



**Exceptional  
Ride Comfort**



**Easy  
Installation**



**Designed for  
Motorcycles**



**TruAIR®  
Technology**



**Rest  
Flat-Footed**



**Reduced  
Painful  
Bottoming**



**Rigorously  
Tested**



**Prevent  
Dangerous  
Tire Wear**



**Prevent Extra  
Drivetrain  
Stress**



**Global,  
Multilingual  
Tech Support**